

# 1636 USER GUIDE DIN RAIL MOUNTED SMART LOOP POWERED TRIP AMPLIFIER



### IMPORTANT - CE & SAFETY REQUIREMENTS

Important - Potentially Hazardous situations. Persons responsible for the installation and operation of this equipment must be fully aware of all aspects of this guide. Failure to follow the instructions can cause severe injuries and damage

This product is suitable for environment Installation category II pollution degree. The product is classed as "PERMANENTLY CONNECTED EQUIPMENT", and must be DIN rail mounted, inside a suitable enclosure providing environmental protection to IP65 or greater.

DC supply must be derived from a local supply and not a distribution system. Max relay contact rating 250VAC @ 1 a (30VDC @ 1A). Any circuit connected to a contact must be fused with a 2A (T) fuse.

The product contains no serviceable parts, or internal adjustments. No attempt must be made to repair this product. Faulty units must be returned to supplier for repair. This product must be installed by a qualified person. All electrical wiring must be carried out in accordance with the appropriate regulations for the place of installation. Before attempting any electrical connection work, please ensure all supplies are switched off.

ABSOLUTE MAXIMUM CONDITIONS (To exceed may cause damage to the unit):

Loop Current with over voltage + 50mA

. Input Voltage DO NOT CONNECT TO VOLTAGE SOURCE, FOR USE IN SERIES WITH 4 to 20mA CURRENT LOOPS ONLY Temperature -30 to 75°C Humidity 10 to 95% RH (Non condensing)








PLEASE REFER TO THE PRODUCT LABEL FOR MANUFACTURERS CONTACT DETAILS.


Every effort has been taken to ensure the accuracy of this document, however we do not accept responsibility for damage, injury, loss or expense resulting from errors and omissions, and we reserve the right of amendment without notice.

#### RECEIVE AND UNPACKING


Please inspect the packaging and instrument thoroughly for any signs of transit damage. If the instrument has been damaged, please notify your supplier immediately.

### OPERATION (please refer to data sheet for full technical specification.)

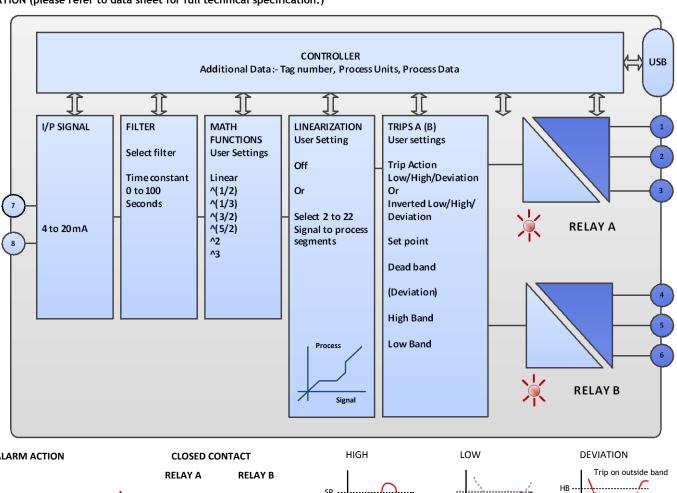

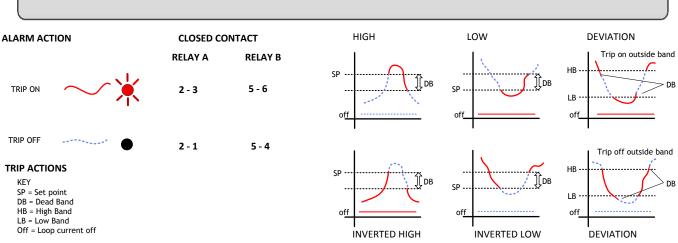



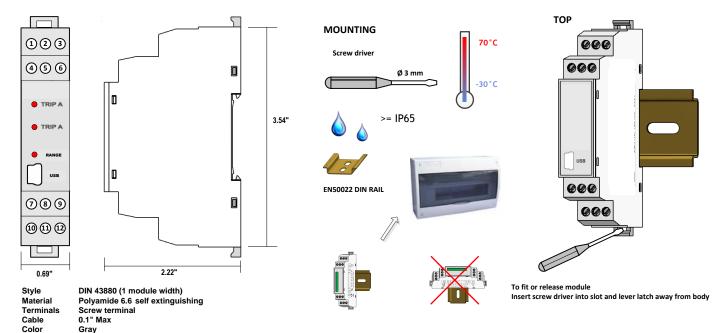



#### CONFIGURATION


This product is configured using the USB port of a PC running USB\_Speed\_Link software, available from your suppliers web site. During configuration the product is powered direct from the USB port, removing the need for additional power. If the user wishes to monitor live process data during configuration, then power must be applied. Note the input and USB port of the device share the same ground, therefore care must be taken to ensure isolation between PC and input circuit. This is best achieved by using a portable laptop or notebook PC. USB\_Speed\_Link software is available with help menus to guide the user through the configuration procedure. Unless specified at the time of order this product is supplied with the default configuration listed below.







Factory default: Range Trip A = High Setpoint Trip A = 50 Dead Band Trip A = 0.1 Trip B = High Setpoint Trip B = 50 Dead Band Trip B = 0.1

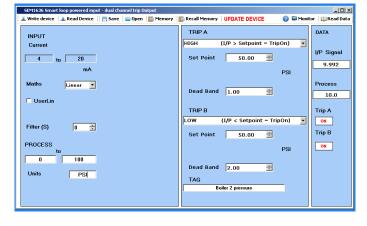



## **ELECTRICAL INSTALLATION**

- 1.0 TURN OFF SUPPLY BEFORE WORKING ON ANY ELECTRICAL CONNECTION.
- 2.0 MAX CONTACT RATING 250VAC or 30VDC @ 1 A. IMPORTANT! FUSE CONTACT CIRCUITS 2A (T). 3.0 SUPPLY IS OVER VOLTAGE PROTECTED AND FUSED WITH INTERNAL RESSETTBLE FUSE.

#### INPUT CONNECTION

For cable length < 3 Meters no Shielded wire or twisted pair required.

