
- UP TO 100 BAR PRESSURE/ TEMPERATURE DISPLAY WITH SCALING/ LINERIZATION
- BATTERY POWERED, USB AND NFC INTERFACE
- DUAL RELAYS, MAX/ MIN INFORMATION
- USER SET DISPLAY MESSAGING
- > 3600 POINT LOGGER WITH USB AND NFC INTERFACE



The DM670PM series of battery powered indicators accept gauge pressure inputs up to 100 bar and displays the sensor pressure in BAR, PSI or the user's engineering unit on a 6-digit LCD display. The instrument offers an advanced display mode allowing the user to also display one or two (1 to 32) character messages. Additional to the messages, the user may select an alert event to occur when the pressure is within a band. The two change-over relays can be used together with the messaging and alerts to provide switching at user set points. In addition to this on board datalogging is also available to record process details at up to 3600 points.





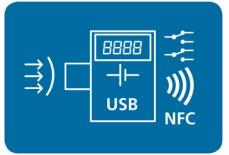

FEATURE HIGHLIGHTS

DUAL RELAYS

The instrument is equipped with dual volt-free change over type relays, operating independently. The user may select one of seven actions including deviation, latched or non-latched operation, with fully adjustable set point and dead-band. The Relays may be turned off if not required to extend battery life. An option is provided to trigger an alert event when a relay contact is on.

DATA LOGGING FUNCTION

DM670PM also provides a powerful data logging function. The log points can be set up to 3600 points, each point is time and date stamped together with process value, temperature and relay state information. The log rate is selectable in steps. The start of log can be delayed if required. Either fixed or rolling logs may be performed.

Two methods of reading the log are available. The USB configuration reads the log and allows the user to save to a text file for export to other programs. While the NFC android interface allows data transfer to android phones or tablets and using the downloadable App the data can be graphed and forwarded by email, Bluetooth etc. The NFC interface is also capable of starting a new log with different log period and modes.

CALIBRATION/ USER LINEARIZATION

5-point calibration can be applied using the USBSpeedLink software

As well as straight line interpolation up to 22 points (x,y) of user linearization are available for creating custom curves and corrections.

REAL TIME CLOCK

Date and time stamped maximum, minimum and average temperature values as well as relay on and relay off data is recorded and can be displayed along with the current time and date. The real time clock is also used to record the data logged points.



INPUT		SPECIFICATIONS
@20°C		
PRESSURE		
Туре	Range	Accuracy/ stability
Sealed gauge *1	(0 to 3) bar	±0.5% of full scale between (0 to 50) °C *2
	(0 to 30) bar	±0.7% of full scale between (-10 to 80) °C
	(0 to 100) bar	*2
Overpressure	4 x pressure range	Up to maximum 350 Bar
Thermal drift		(-10 to 80) °C compensated
*1 Shows zero Bar at 1.0 Bar a	bsolute	
*2 Total error band: Maximum	deviation within specified	pressure and operating temperature range

INPUT @20°C		SPECIFICATIONS
Temperature		
Type	Range	Accuracy/ stability
	(-40 to 110)°C	Typically, ±2.0°C
	<u>'</u>	<u> </u>

To maintain full accuracy annual calibration is required contact support@status.co.uk for details

DISPLAY	
Type/ options/ function	Description
Display height	15.8 mm non-backlit
Display information options Some information is displayed scrolling.	6 digits 14 segment input value plus "Warning"," Transmit", "NFC", "USB", "Log", "Battery"," Off-set" icons, 8 segment log volume indicators. Maximum, minimum, average*1. Date and time. Custom messages for visual alarms/ information. Relay condition.
High intensity LED	Alarm and warning options
*1 Rolling average data log is independent of data logging	

RELAYS	
Relay 1 and Relay 2	
Type/ options/ function	Description
2 x independent relays	Single pole change-over (common, N/o, N/c)
Rating	48 VDC maximum @ 1 A (5 mA minimum)
	28 VAC RMS maximum @ 1 A



Type/ options/ function	Description	Notes
Configuration hardware	USB Mini B port	Cable not included
Configuration software	USBSpeedLink	Download www.status.co.uk
Operating system	Microsoft Windows	Win 7 or later
Sensor configuration	User calibration	Up to 5 points
•	Off-set in Bar	Applied by button action
Display configuration	Display mode	Basic with advanced options °C or °F
	Pressure units	Bar/ PSI/ mBar/ Pa/ KPa/MPa Kgf/m²/ Kgf/cm²/ Kgf/mm² Atm/ custom units (any)
	Custom units	With 22-point linearization
Pre-set sensor to setpoint	Locks input value to setpoint	For diagnostics
LED alert (advanced mode)	Eight user adjustable pressure bands	Alert LED flash
Warning symbol	Out of range	Warning symbol will flash on LCD
	Low battery level	display
Basic display mode	Update rate	1 s/ 5 s
	Display variable options	Input/ input + units/ input + units + temperature
	Temperature units	°C or °F
	Push buttons	Active/ active with time stamp/ off Options
	Alert LED Rolling average	Period/ number of samples
Advanced display mode *1	Display variable (see basic mode	l e) with messaging ontions
Battery monitor	Alert LED plus message	Relay option
Logger	Set device passkey number	Device passkey is used to protect th
LOGGEI	Clear/ start new log	NFC interface.
Other device options	Synchronise clock	
	Write tag/ contact address	
	Read/ reset maximum and	
	minimum input values	
	Latitude longitude settings	
Relay control	Name(s)	10 characters
	Action	High/ low/ band/ low battery/ on/
	Setpoint	off
	Dead band	In engineering units
	Latch	On/ off
Live data	Read sensor pressure	bar
	Read displayed value	Selected engineering unit
	Read sensor temperature	°C
	Relay 1 state. Relay 2 state	
	Time and date	

*1 Only use advanced display above -5°C ambient temperature, below use basic display



USB LOGGER USER INTERFACE		
Type/ options/ function	Description	Notes
Logger hardware	USB Mini B port	Cable not included
Logger software	USBLogLink	Download www.status.co.uk
Operating system	Microsoft Windows	Win 7 or later
Logger	Start/set log parameters	Interval/ rate/ (delay) start/
	Read log parameters	number of points/ rolling or fixed log
	Stop/ start new log	
	Synchronise device clock	
	Reset maximum and minimum	
	Synchronise/ read clock	
	View log data/ graph log data	Save data to CSV file

NFC LOGGER USER INTERFA ANDROID	CE	
Type/ options/ function	Description	Notes
Logger software	NFCLogLink	@ Google Play Store
Operating system	Android V4.4 Kitkat or later	NFC enabled
Logger	Start/set log parameters	Interval/rate/ (delay) start/
	Read log parameters	number of points/ rolling or fixed log
	Stop/ start new log	
	Synchronise/ read clock	
	Reset maximum and minimum	
	View log data/ graph log data	Save data to text file
	Transfer data via email etc.	Standard Android functions



PUSH BUTTON USER INTERFACE		
Button	Description	Notes
Maximum and minimum	Display/ display and reset	Time and date stamp option
	Offset/ offset reset	
	Rolling average option	Number and rate options
Relay	Display relay configuration	Time and date stamp option
	Reset latched relay	
Relay setpoint adjustment is	not possible using front panel but	tons, USBSpeedLink required
Buttons can be locked out to	avoided tampering	

GENERAL	
Function	Description
Update rate	1 or 5 seconds
Relay response time	< 10 seconds
Battery	1 x (AA 3.6 V lithium)
Battery life	1 year minimum @20°C (longer depending on options selected)
Clock accuracy	±2 seconds per month typically

ENVIRONMENTAL	
Function	Description
Ambient housing temperature	Operating/storage (-30 to 70)°C
Ambient sensor temperature	Operating (-40 to 110)°C
Ambient humidity	Operating/storage (10 to 90) %RH non-condensing
Protection	IP65, cable entry must be sealed to IP65
USB configuration ambient	(10 to 30)°C


CONNECTIONS	
Sensor to process	1/4 inch BSP male with adaptor options (see accessories)
Output relays	2 x Two-part screw connectors
USB connection	USB mini B port

MECHANICAL	
Enclosure (case)	Stainless steel, side or base mount options
Case entry	1 x M16 female thread, blanking plug supplied
Front bezel diameter	113 mm
Weight (approximate)	520 g
Material in contact with media	Stainless steel 316L
O-ring	Viton

APPROVALS	
EMC	BS EN 61326



Choose from options below				
D	M670PM	/ case type	/ range	
Case option			J	
Side entry		I		
Rear entry		J		
Wall mount		L		
Range options				
(0 to 3) Bar			3	
(0 to 30) Bar			30	
(0 to 100) Bar			100	
Example: -	DM670PM	/1	/ 3	

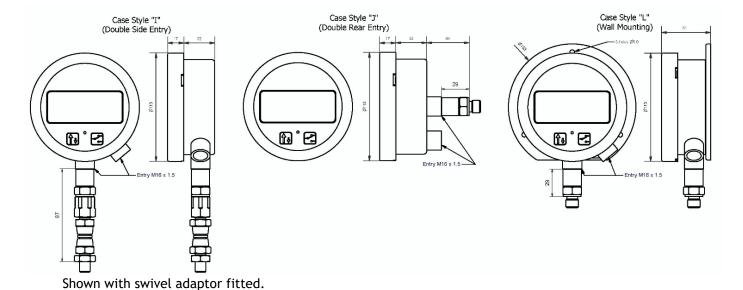

ACCESSORIES				
Swivel adaptor ¼ BSPP	SA14BSP			
Swivel adaptor ½ BSPP	SA12BSP			
Swivel adaptor ¼ NPT	SA14NPT			
Swivel adaptor ½ NPT	SA12NPT			
Swivel adaptor other options available	sales@statinst.com			
Configuration software	USBSpeedLink free of charge from www.statinst.com			
USB logging software	USBLogLink free of charge from www.statinst.com			
NFC logging software	NFCLogLink free of charge refer to Google Play Store			
USB lead	USB lead part number 42-200-0001-01			

Contact sales@statinst.com

The data in this document is subject to change. Status Instruments assumes no responsibility for errors

Status Instruments Inc 12H Worlds Fair Drive

Battery 3.6 V lithium

Tel: (800) 700-3272 Fax: (800) 700-5468 Somerset, NJ 08873 Email: sales@statinst.com Website: www.statinst.com D2607-01-03 CN5590 DM670PM Data Sheet, Page 6 of 6

